


FLOOR FINISH NOTES

1. ALL CONCRETE FLOORS SHALL BE HIGHLY POLISHED. TO AVOID GRINDING OFF THE PAINTED STRIPES, PAINT THE STRIPES AFTER INITIAL GRINDING, BUT BEFORE THE FINAL HIGH-GRIT POLISHING.
2. PROVIDE A TOPICAL CLEAR COAT OF SEALER THAT IS SPECIFICALLY DESIGNED FOR COMPATIBILITY WITH BOTH THE PAINT AND THE POLISHING EQUIPMENT.
3. PROVIDE TWO THIN COATS OF A CLEAR SPECIALIZED URETHANE, LIKE NATIONAL POLYMER 321 TO CHEMICALLY BOND THE STRIPES TO THE CONCRETE SURFACE.
4. ALLOW PAINTED STRIPES TO CURE FOR 24-48 HOURS BEFORE APPLYING SEALER.
5. BEFORE APPLYING SEALER, ENSURE THE PAINTED SURFACES ARE FREE OF DUST OR OILS USING A TSP CLEANER.
6. APPLY THE SEALER IN TWO THIN COATS RATHER THAN ONE THICK LAYER TO PREVENT BUBBLING OR CLOUDING.
7. ENSURE THE SEALER IS FULLY CURED, TYPICALLY 72 HOURS, BEFORE BEGINNING THE FINAL POLISHING STEPS.

FINISHES FLOOR PLAN

SCALE: 1/8" = 1'-0"
0 4' 8' 16'

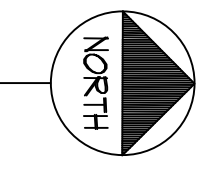

DATE:	01-30-2026
NO.	REVISION DATE
1	06-12-2026
2	
3	

SHEET:		A701
DRAWN BY:	CHECKED BY:	
DMW	MRL	
PROJECT NO.:	TLG-2515	
THE LANE GROUP INC.		